

KinderSign - Connect the Android Tablet to WiFi

The WiFi Connection for your Android tablet is normally set during initial setup of the Device. If you need to change the original WiFi Connection:

 
- A** Tap the **Settings** icon on the tablet home screen.




- B** Tap **Connections**.



- C** Make sure WiFi is turned on.



 - D** Tap the name to select the secure WiFi network you would like to join.




- E** Enter the password for the secure WiFi network, then tap **Connect**. Verify the connection was successful.



- F** Check the signal strength on the top right corner of the tablet screen to confirm the tablet is connected to WiFi.



- G** Once you confirm the connection, tap the **Home** button  on the lower portion of the tablet to return to the Home screen.